
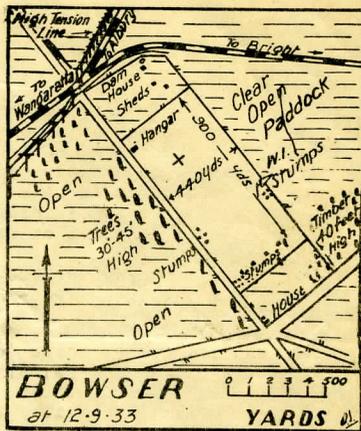


NOTICE TO AIRMEN

NO. 76/1934.

CANCELS No. 49/1929.

BOWSER, VIC.

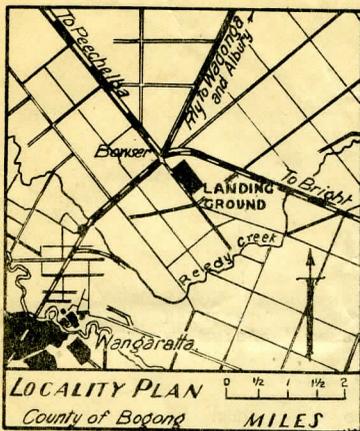

CLASS OF GROUND: Emergency landing ground.

PROPRIETORS: Commonwealth of Australia, (Controller of Civil Aviation, Melbourne) under lease from Mr. F.A. Hahne, Bowser, Victoria.

POSITION: Situated $\frac{1}{4}$ mile East of Bowser Railway Station, and 4 miles North-East of Wangaratta. Lat. $36^{\circ} 18' S$. Long. $146^{\circ} 23' E$.
MAGNETIC VARIATION: $8^{\circ} 25' E$. approx.

DISTINCTIVE FEATURES: Rectangular ground, near the junction of the Railway lines from Bowser to Yackandandah and Albury and Peechelba.

MARKINGS: Ground Mark (White cross) and boundary mark. Wind indicator in centre of North-East boundary.

DESCRIPTION: Level, smooth surface except for one slight dip at the centre of the southern boundary.

DIMENSIONS: N.W. - S.E. 900 yards; N.E. - S.W. 440 yards.

HEIGHT ABOVE SEA LEVEL: About 500 feet.

APPROACHES: South-West, tall scattered trees; South-East, clear; North-West, high tension line 18 feet high 300 yards from boundary fence.

SURROUNDING COUNTRY: Flat country, with scattered trees. Many paddocks under crop.

PETROL AND OIL: Supplies on landing ground.

WATER SUPPLY: On Western boundary.

WORKSHOPS: At Wangaratta.

HANGAR ACCOMMODATION: One small shed.

NEAREST TELEPHONE & TELEGRAPH: Bowser, at store.

NEAREST TOWN: Wangaratta, 4 miles.

NEAREST RAILWAY STATION: Bowser, $\frac{1}{4}$ mile South-West.

CHARGES: Nil.

REMARKS: Stock are sometimes grazed on the landing area and private pilots or owners are advised to give the proprietor at least one day's notice before using the ground, but in any case, the pilot or owner of privately owned aircraft is not absolved, under the terms of the lease, from responsibility for any damage to stock or property caused by such aircraft.

Relative Strip Map No. 11.

R. Johnston